


ERECTING THE FRAME


WALL STRUTS | PART L

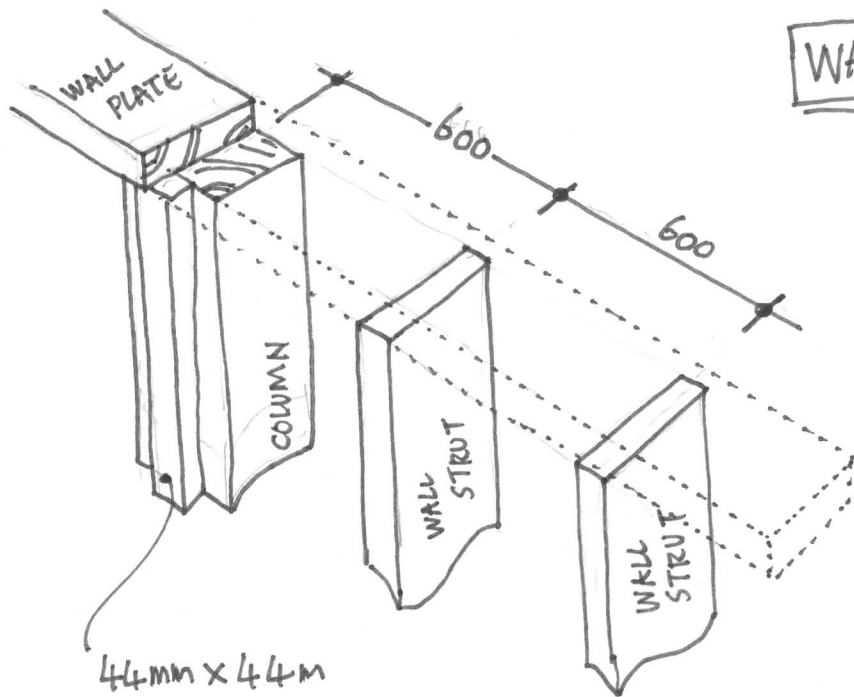

44mm x 44mm
BATTON FIXED
TO FRONT OF
COLUMN TO
LINE WITH
FRONT OF WALL
PLATE.

THE WALL STRUTS SIT ON THE TWO TIMBERS BELOW AND UNDERNEATH THE WALL PLATE. THEY SHOULD BE SKEW NAILED IN PLACE. A CARPENTER WILL SHOW YOU HOW TO DO THIS.

BE CAREFUL TO MAKE SURE THAT THEY ARE PERFECTLY PLUMB.

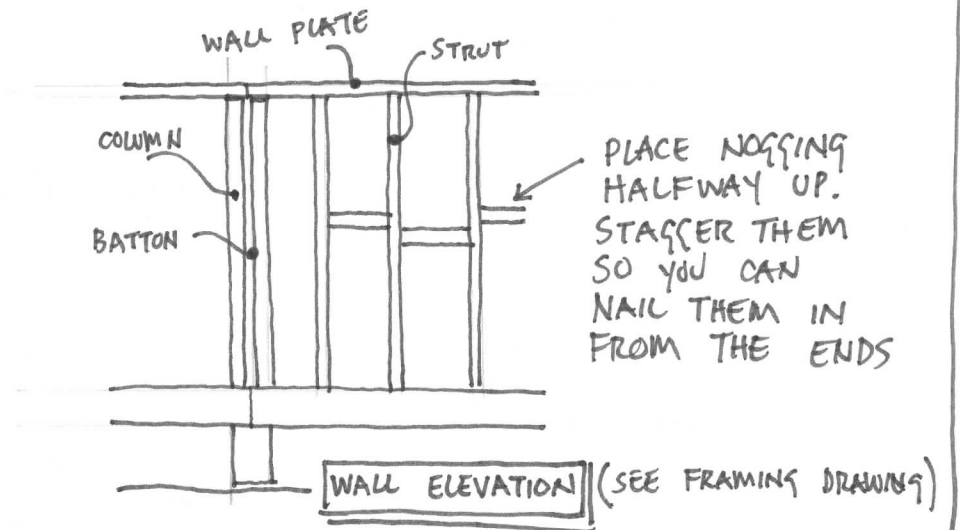

PLACE NOGGING
HALFWAY UP.
STAGGER THEM
SO YOU CAN
NAIL THEM IN
FROM THE ENDS

WALL ELEVATION (SEE FRAMING DRAWING)