


FINISHING THE FRAME

THE LAST THING TO DO IS THE WALL STRUTS TO THE END ELEVATIONS

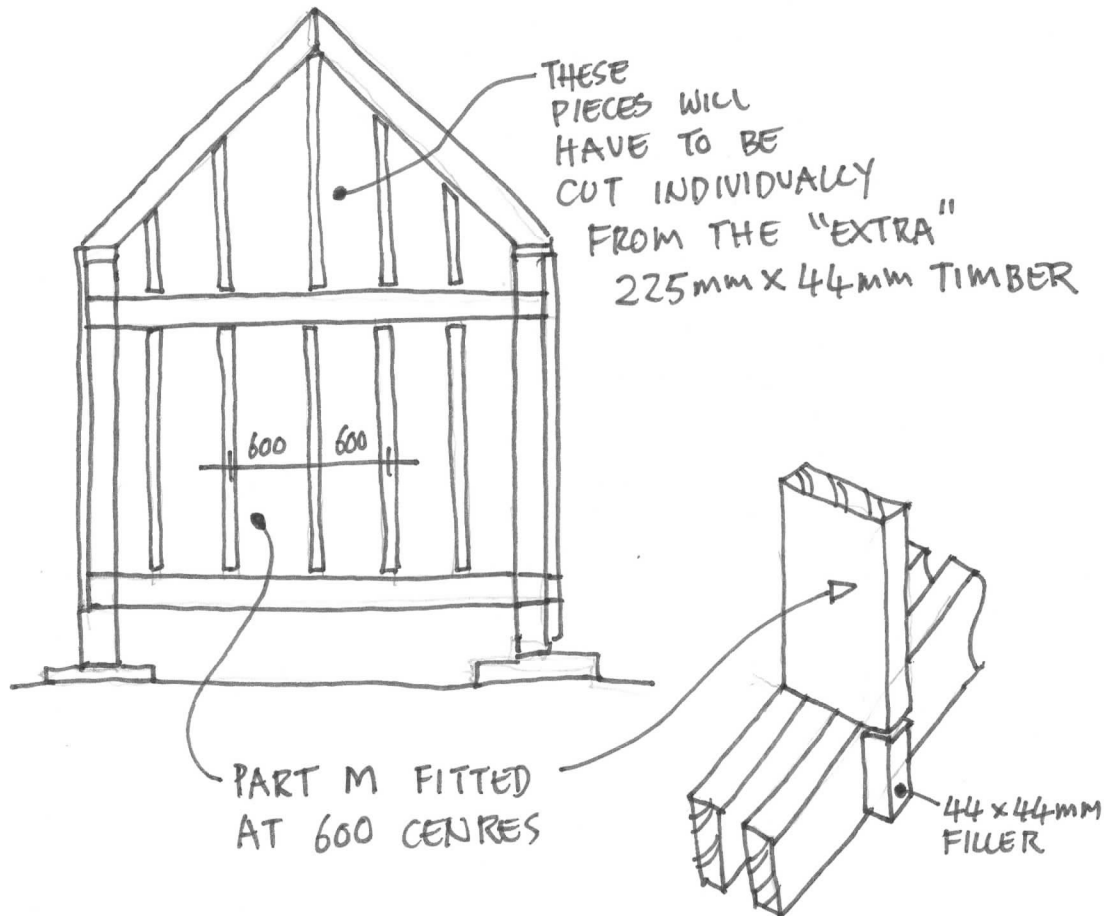

THE LAST LAST THING TO DO IS TO FIX THE FRAME DOWN TO THE GALVANISED SHOES USING HEAVY SCREW BOLTS

THE LAST LAST LAST THING TO DO IS....

HAVE A PINT